


NOTES:

1. ALL TENANT LEASE AREAS ARE MEASURED FROM THE TENANT LEASE LINE TO THE OUTSIDE FACE OF EXTERIOR WALLS OR THE CENTERLINE OF ADJACENT TENANT DEMISING WALLS AND/OR SERVICE EXIT CORRIDOR WALLS.
2. THE INFORMATION SHOWN IN THE ABOVE PLAN, WHILE NOT GUARANTEED, HAS BEEN OBTAINED FROM A SOURCE WE BELIEVE TO BE RELIABLE.

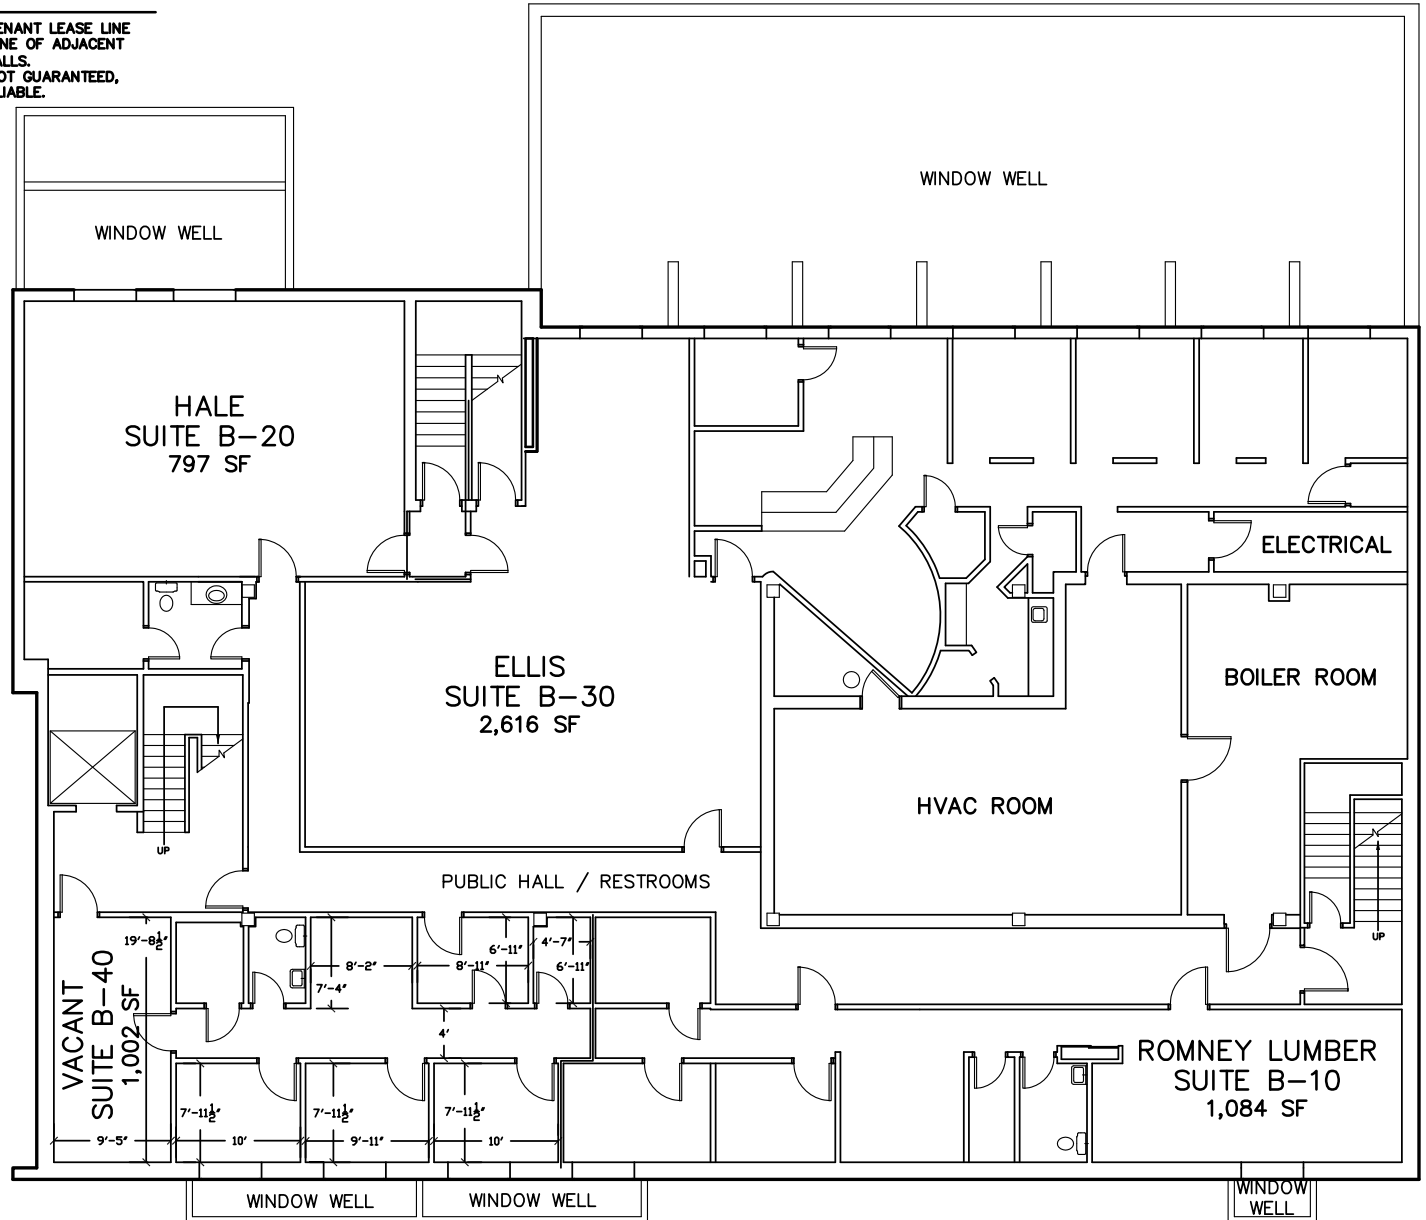

Basement Lease Plan

NTS